


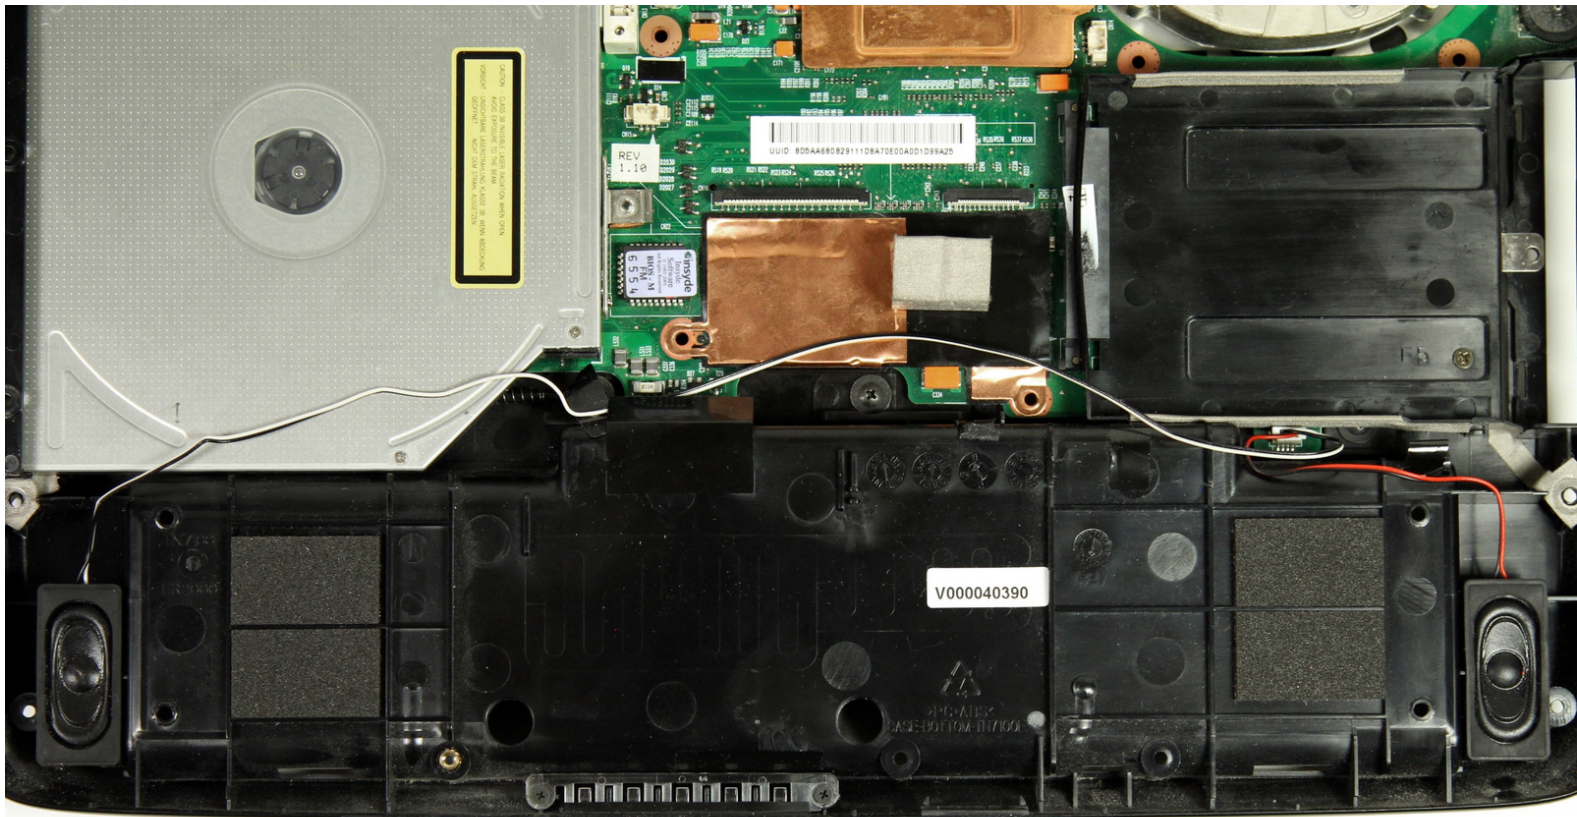

Toshiba Satellite A65-S126 Speaker Replacement

Replace broken speakers on a Toshiba A65-S126.

Written By: Cole Uhland



INTRODUCTION

This is a step by step guide of how to replace the speakers in case of malfunction or upgrade.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Battery



- Flip the laptop over so the bottom is facing up.
- Slide each of the three tabs on the bottom half of the assembly into the unlocked position.

Step 2



- Gently lift the battery out of the computer.

Step 3 — Upper Assembly



- Remove the single 3mm Phillips #00 screw that secures the wireless card cover.

Step 4




- Remove the WIFI module cover. It will pull right off.

Step 5



- Unplug the white and black wires from the WiFi module.

Step 6

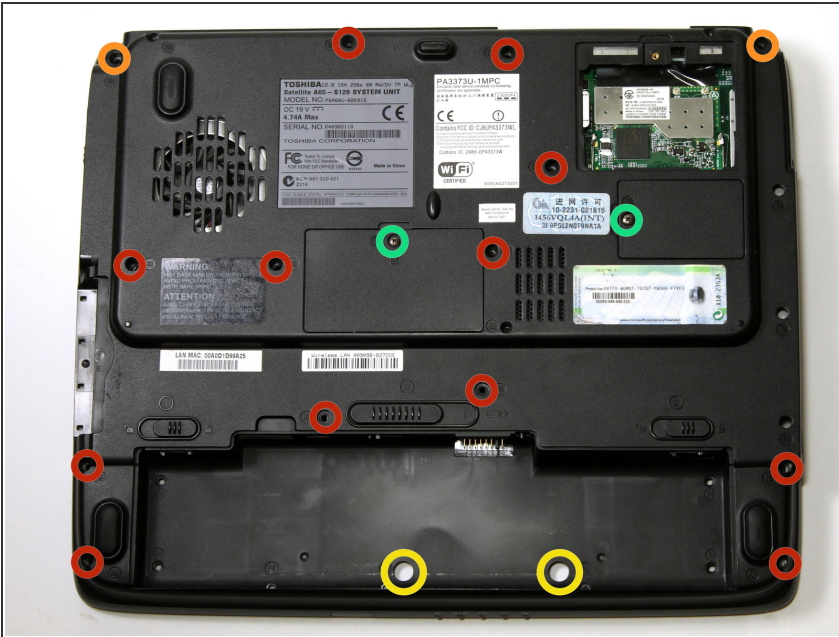

- Remove the twelve 8mm button head Phillips #00 B8 screws.
- Remove the two 14 mm button head Phillips #00 B14 screws.
- Remove the two 10 mm Phillips #00 battery compartment screws.
- Remove the two 8 mm Phillips #00 screws.

Step 7





- Remove the seven 4mm flat Phillips #00 screws.
- Remove the seven 20mm button head Phillips #00 screws.

Step 8




- Use the plastic opening tool to pry the two halves apart.

Step 9 — Speaker

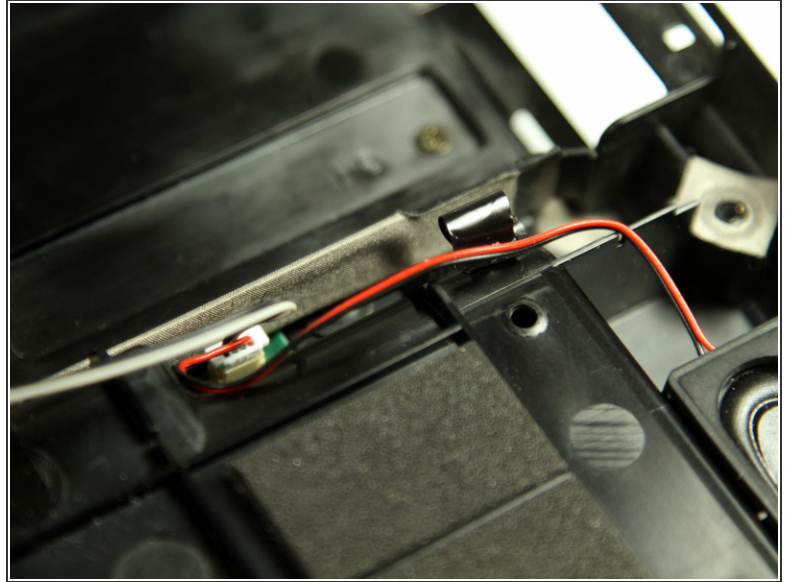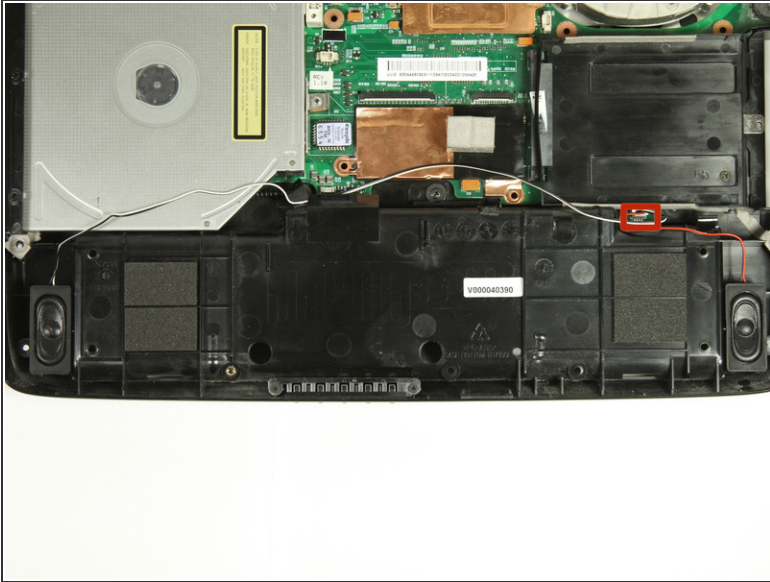


- Locate the plug for the speaker wires on the bottom of the laptop.

Step 10

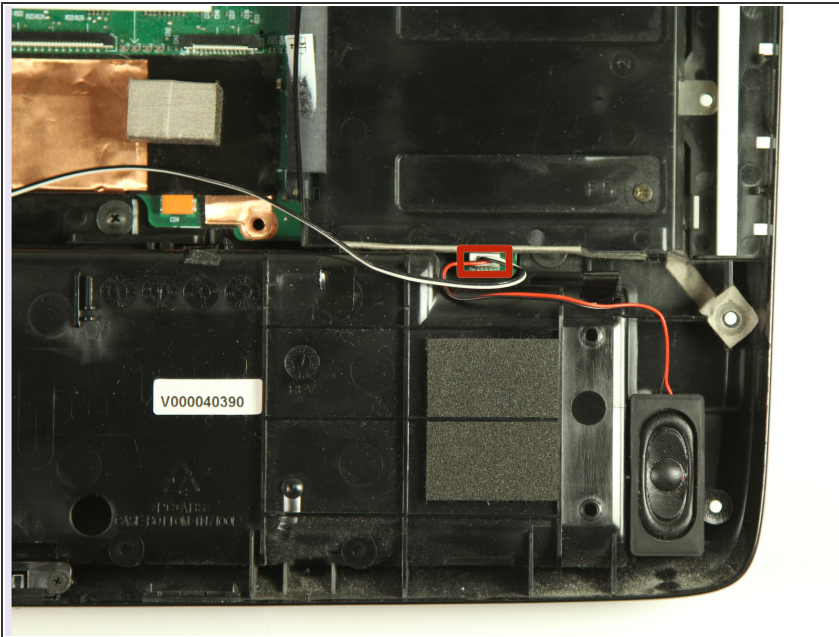

- Unplug the speaker wire connector.

Step 11

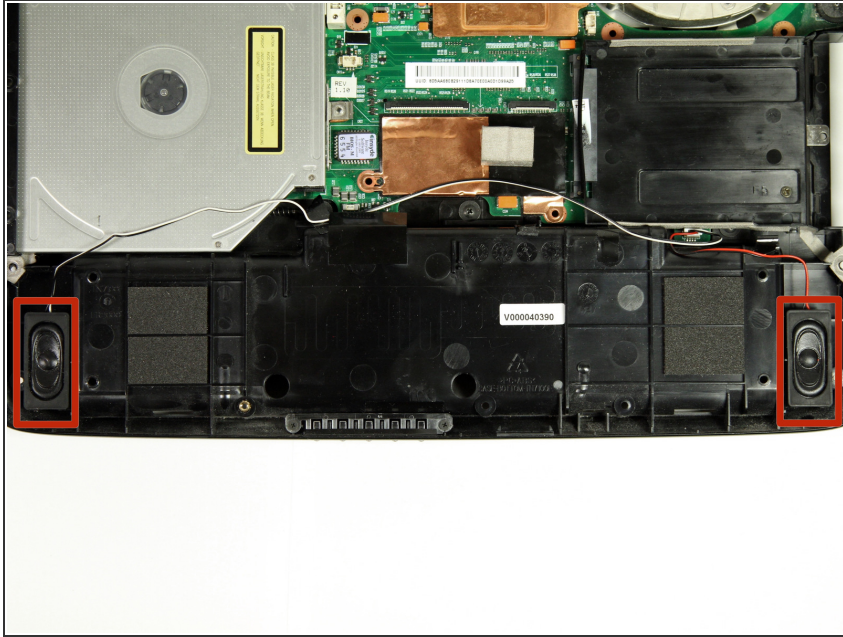

- Remove the speakers by sliding them straight up. They should slide out with ease.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-24 09:40:19 AM.